




# COOKTOP PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

30" ELECTRIC  
DROP-IN RANGE  
SELF CLEANING  
OVEN

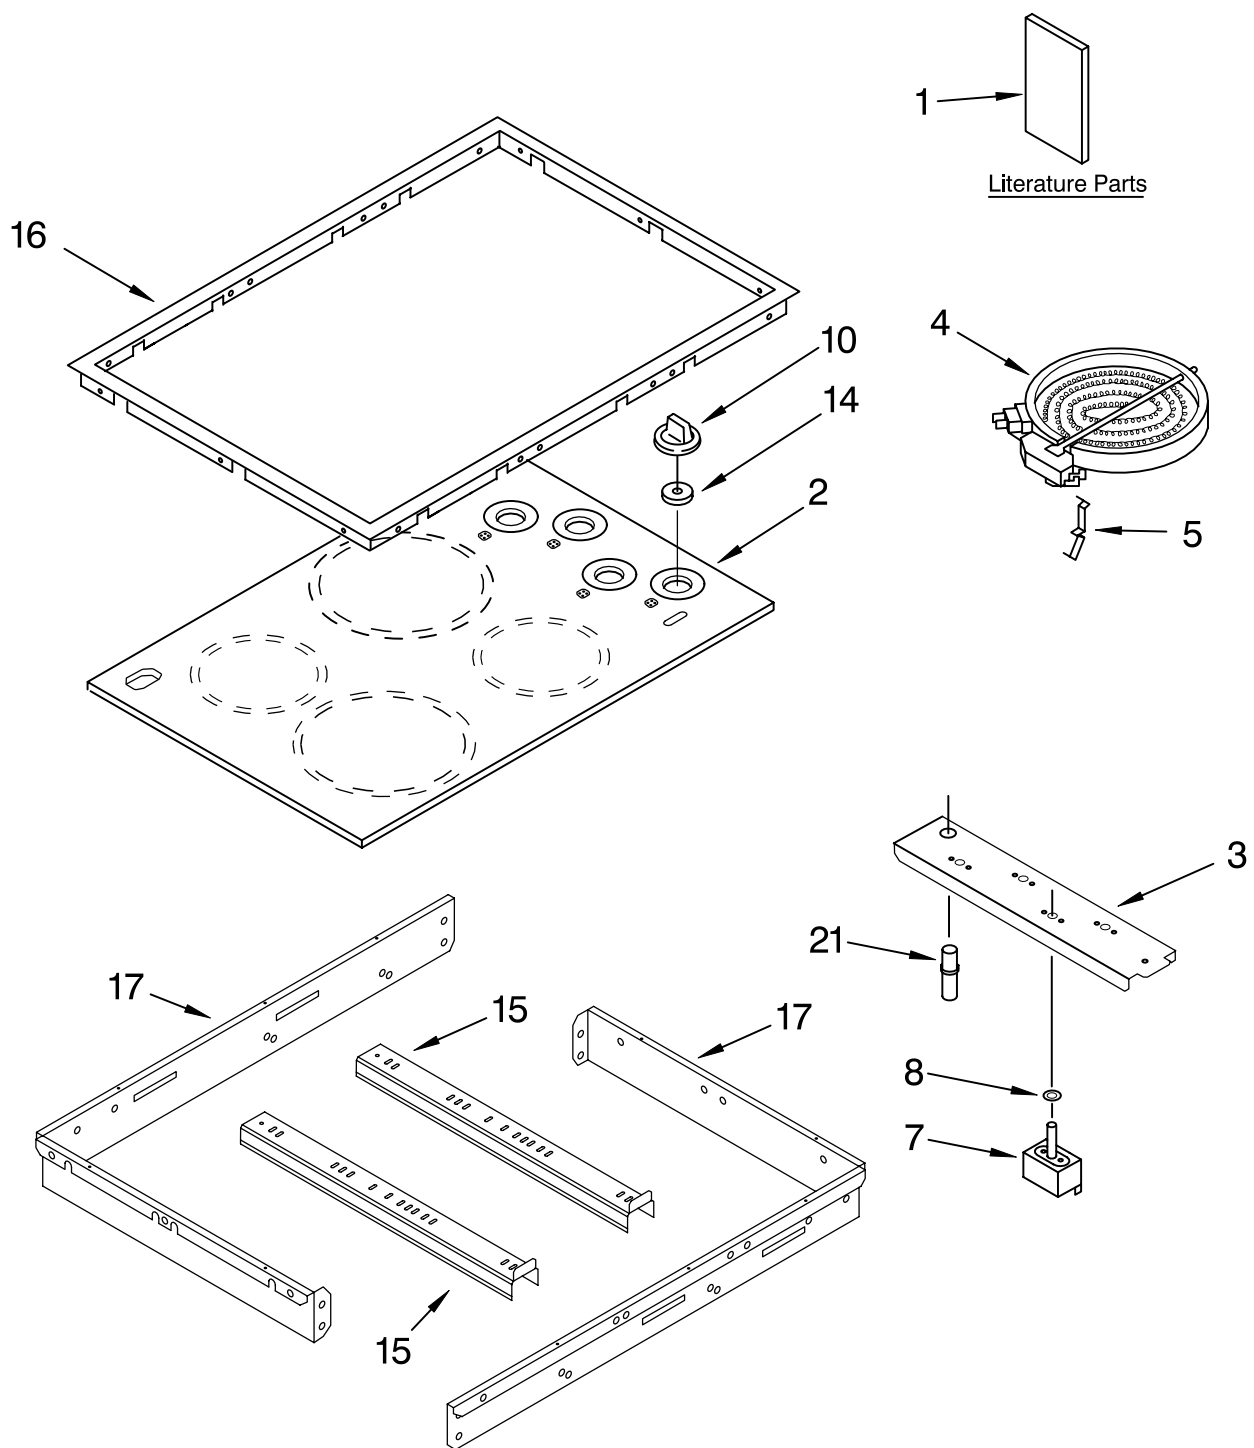

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# COOKTOP PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)


Illus.	Part
No.	No. DESCRIPTION

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	Literature Parts
	LIT3191800 Installation Instructions
	LIT3191537 Use & Care Guide
	LIT3192844 Tech Sheet
	LIT3191638 Safe Cooking Tips
2	Cooktop, Glass
	3191843 Black
	3191189 White
3	3191310 Bracket, Switch Mounting
4	Element, Surface
	8272567 1200W RF-LR
	8272566 1800W RR
	8272565 2500W LF
5	3191791 Spring, Locator
	246119 Screw (8)
7	Switch, Infinite
	3191049 1200W RR-LR (Silver Shaft)
	3191050 1800W RR (Yellow Shaft)
	4454541 2500W LF (Red Shaft)
	311865 Screw
8	3183956 Seal, Switch Cover
10	Knob, Control (4)
	3196231 Black
	3196232 White
14	3182435 Seal, Switch (4)
15	3191515 Bracket, Support Element
16	Trim Ring, Cooktop
	3193228 Black
	3193227 White
	3196537 Screw
17	3192452 Frame, Cooktop
21	3191952 Lamp, Indicator
	3191953 Bumper, Rubber
	9750835 Bumper, Door

# OVEN PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

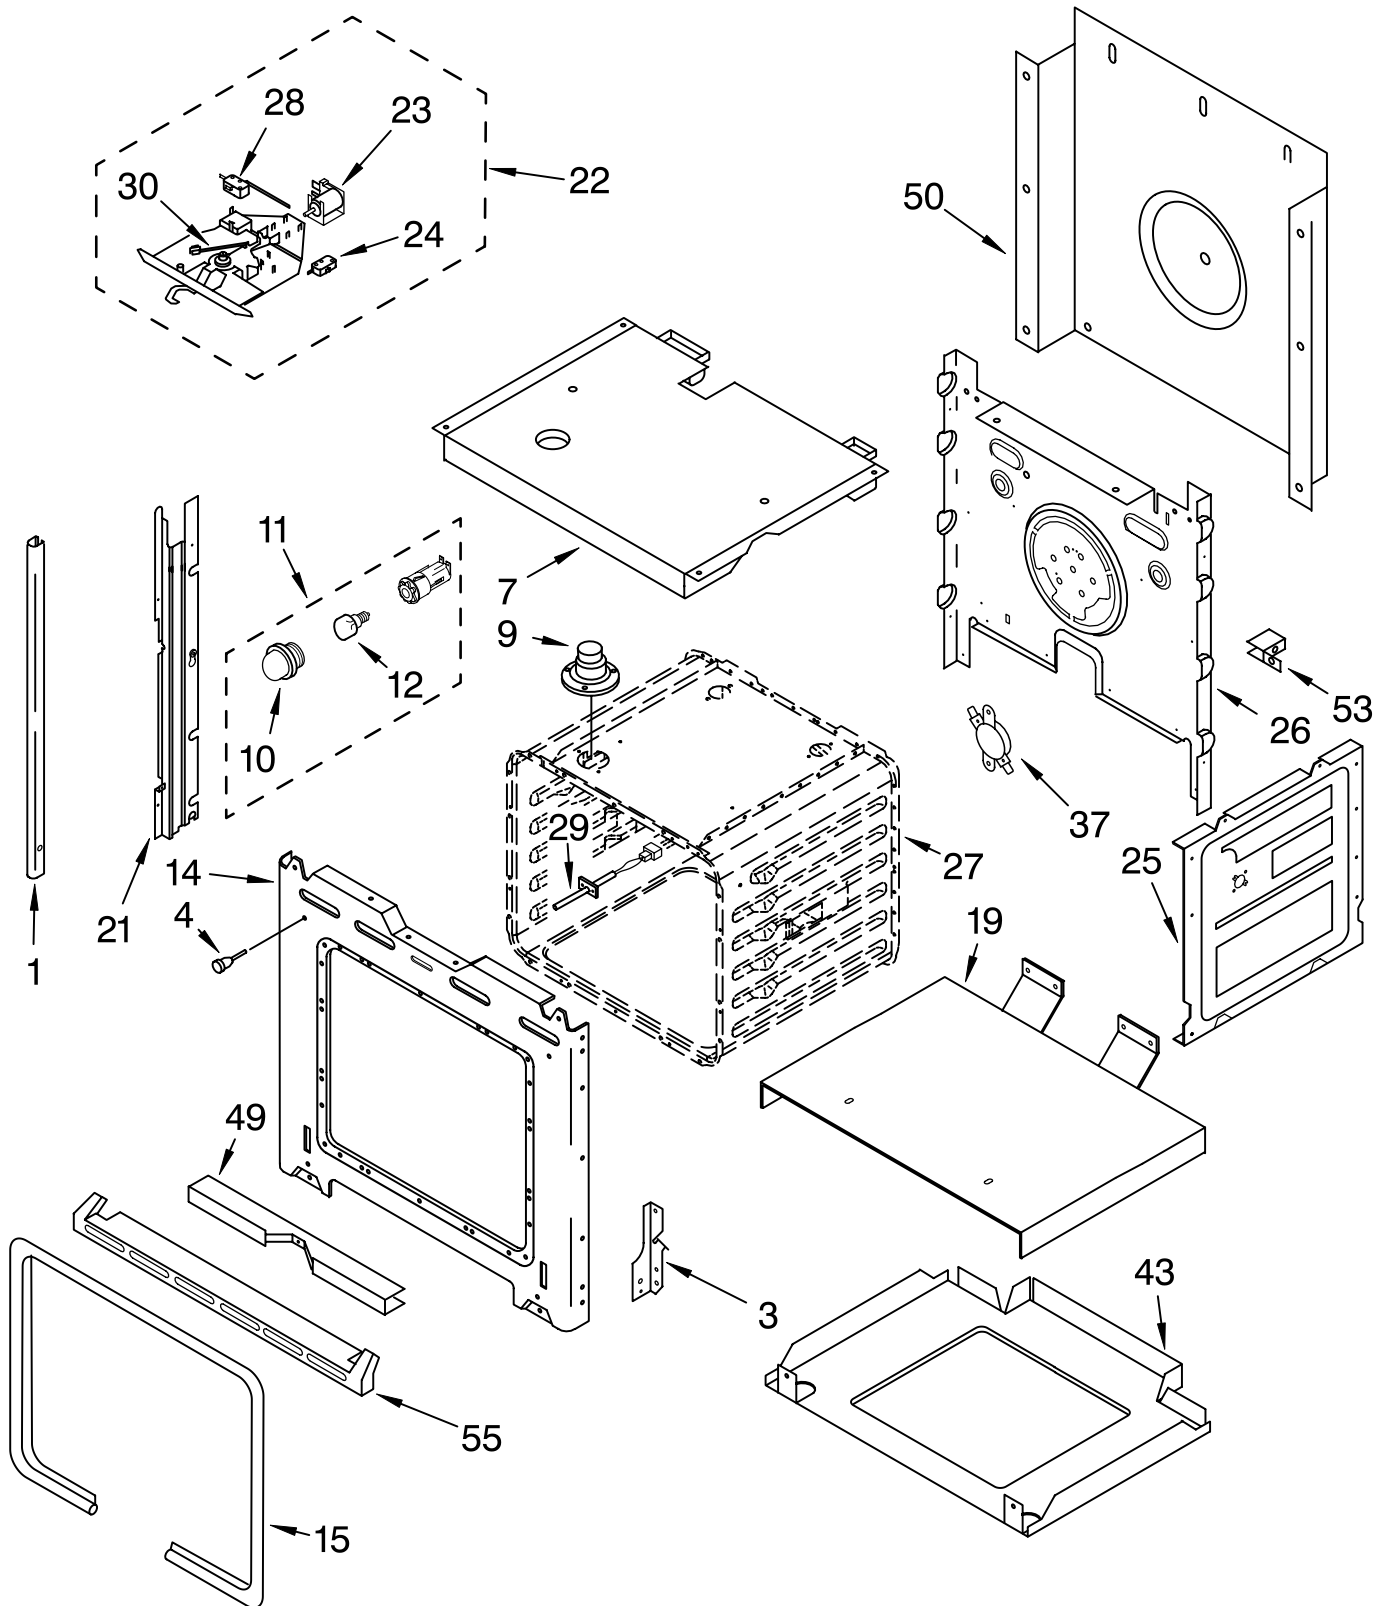

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

- |         |                         |
|---------|-------------------------|
| 1       | Trim, Side (Right Hand) |
| 4450844 | Black Model             |
| 4449747 | Screw                   |
| 4450845 | White Model (Left Hand) |
| 4450847 | Black Model             |
| 4449747 | Screw                   |
| 4450848 | White Model             |
|         | Screw                   |
| 4449747 | Black                   |
| 4449041 | Bright                  |
| 3       | Hinge Receiver          |
| 4455520 | Left Hand               |
| 4455521 | Right Hand              |
| 4       | 4448520 Bumper, Door    |
| 7       | 4455286 Top Chassis     |
|         | 4449809 Screw           |
| 9       | 4452158 Tube, Vent      |
|         | 4449154 Screw           |

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- |    |         |                               |
|----|---------|-------------------------------|
| 10 | 4452165 | Lens, Light                   |
| 11 | 4452368 | Oven Light Assy               |
| 12 | 4452166 | Bulb, Light                   |
| 14 | 4455612 | Frame, Front                  |
|    | 4449040 | Screw                         |
|    | 4450118 | Nut                           |
| 15 | 4455382 | Gasket, Door                  |
| 19 | 4451478 | Support, Insulation           |
|    | 4449809 | Screw                         |
| 21 |         | Rail, Side                    |
|    | 4450579 | Right Side                    |
|    | 4450580 | Left Side                     |
|    | 4448444 | Grommet                       |
|    | 4449154 | Screw                         |
| 22 | 4451896 | Latch Assy                    |
| 23 | 4452224 | Solenoid                      |
| 24 | 4452312 | Micro Switch N.C.             |
|    | 4449809 | Screw                         |
| 25 | 4455641 | Side, Chassis (R.H. & L.H.)   |
|    | 4449809 | Screw                         |
| 26 | 4452234 | Back, Chassis                 |
|    | 4449809 | Screw                         |
| 27 |         | Liner, Oven (Not serviceable) |

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

- |    |         |                               |
|----|---------|-------------------------------|
| 28 | 4451426 | Micro Switch                  |
| 29 | 4455636 | Sensor                        |
|    | 4449154 | Screw                         |
| 30 | 4451537 | Spring, Latch                 |
| 37 | 4451442 | Thermostat (TOD) (Temp.) SPST |
| 43 | 4455530 | Base, Chassis                 |
| 49 | 4448933 | Retainer, Gasket              |
|    | 4449154 | Screw                         |
| 50 | 4451747 | Cover, Back                   |
|    | 4449809 | Screw                         |
| 53 | 4449845 | Support, Bracket              |
|    | 4449809 | Screw                         |
| 55 |         | Trim, Bottom                  |
|    | 4448477 | Black Model                   |
|    | 4448478 | White Model                   |


## FOLLOWING PARTS NOT ILLUSTRATED

### INSULATION

- |         |                  |
|---------|------------------|
| 4449316 | Insulation, Wrap |
| 4450365 | Insulation, Back |

# CONTROL PANEL PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

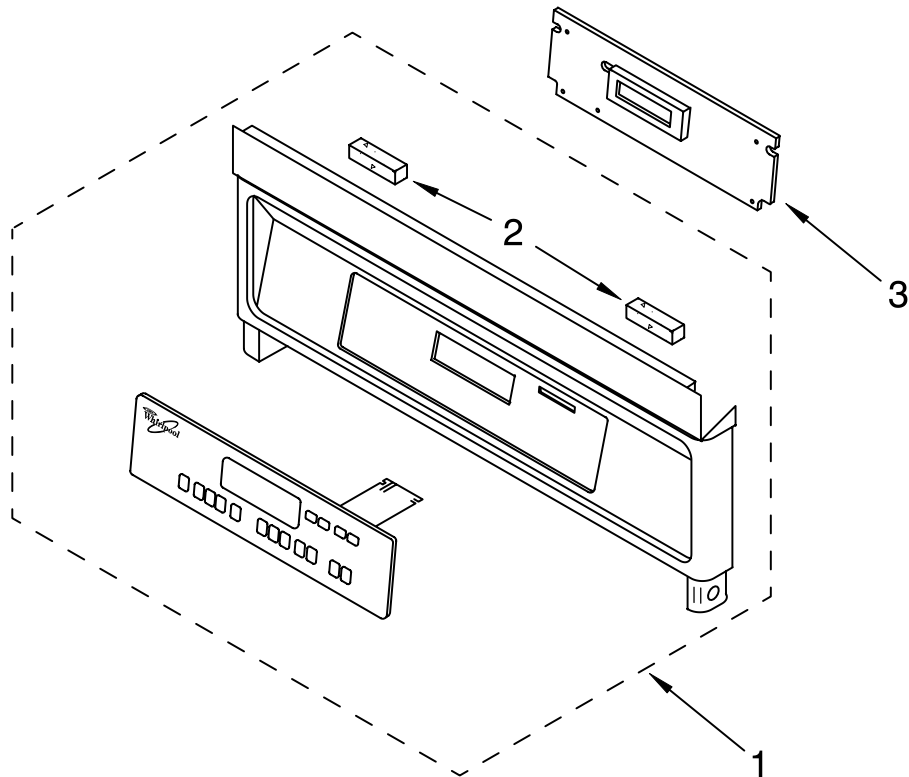

Illus. No.	Part No.	DESCRIPTION
---------------	-------------	-------------


NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	Control Panel Assy. W/Membrane Switch
4452844	Black Model
4452845	White Model
4449745	Screw
3400832	Screw
2	4451034 Gasket, Control Panel
3	4452892 Microcomputer
	4449745 Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# OVEN DOOR PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

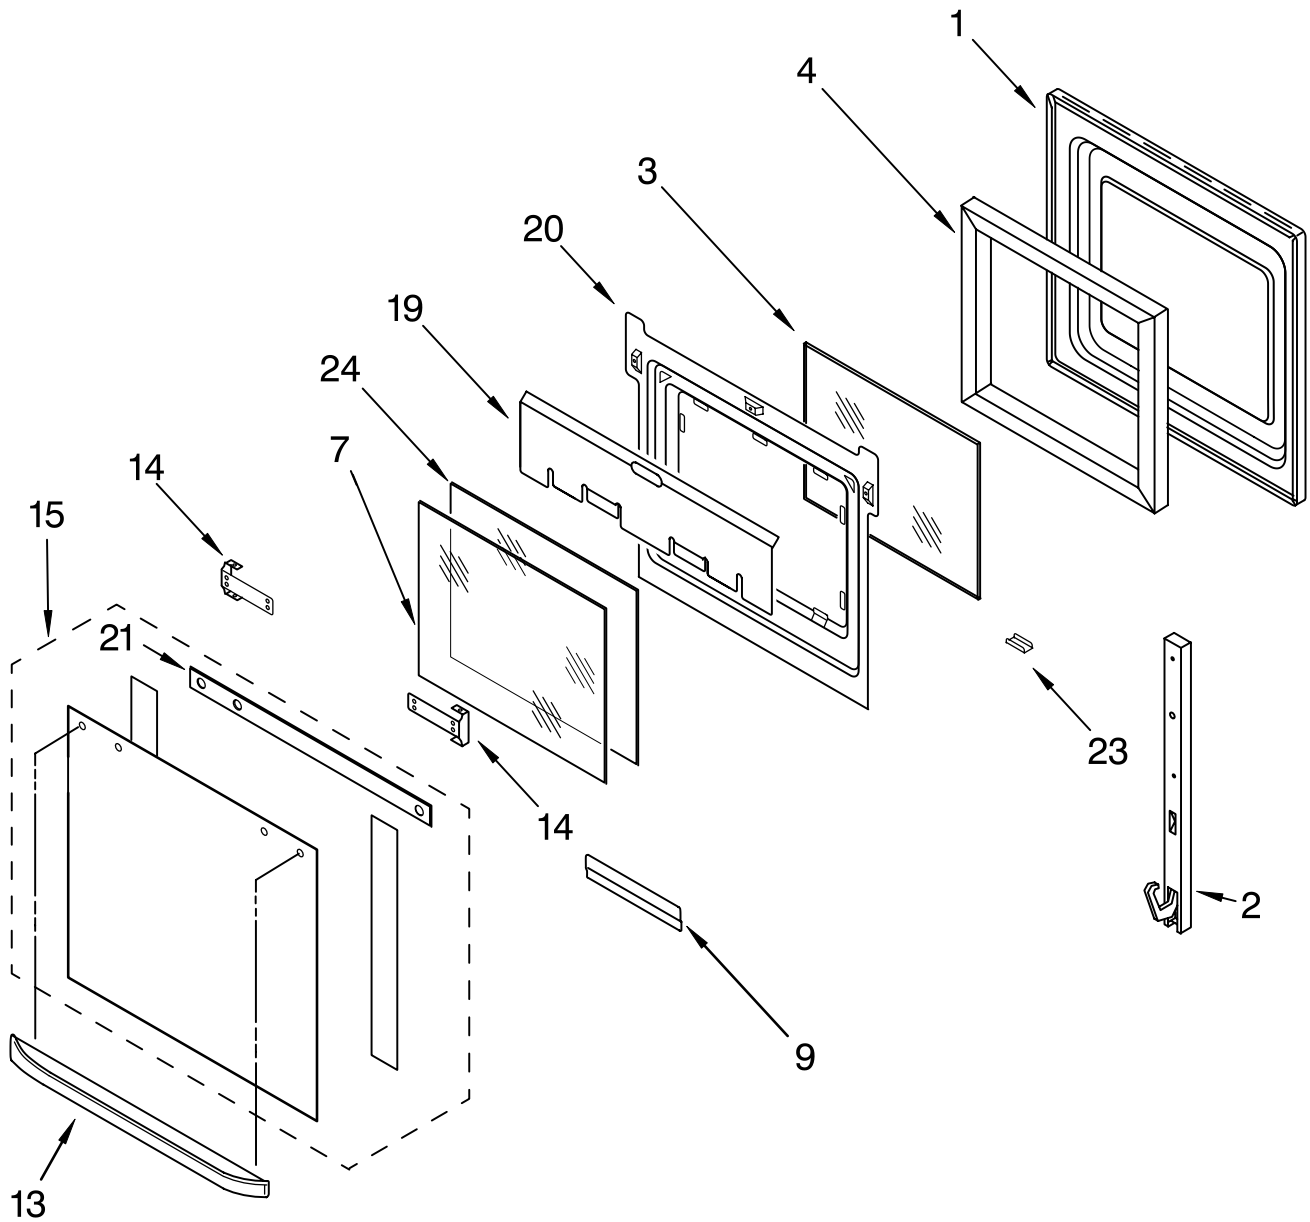

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451719	Door Liner
2	4455525	Hinge, Door
	4449743	Screw
3	4449259	Glass, Inner
4	4451722	Insulation, Door

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

7	4449263	Glass, Inner
9	4451668	Retainer, Glass
	4449809	Screw
13		Door Handle
	4448854	Black Model
	4448855	White Model
14	4450813	Bracket, Handle
	4451040	Screw
15		Assy, Door Glass
	4452065	Black Model
	4452066	White Model


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

19	4450362	Shield, Heat
	4449809	Screw
20	4451671	Retainer, Glass
	4449809	Screw
21	4451674	Seal, Door Top
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model
	3400832	Screw
24	4455257	Glass, Inner

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# TOP VENTING PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

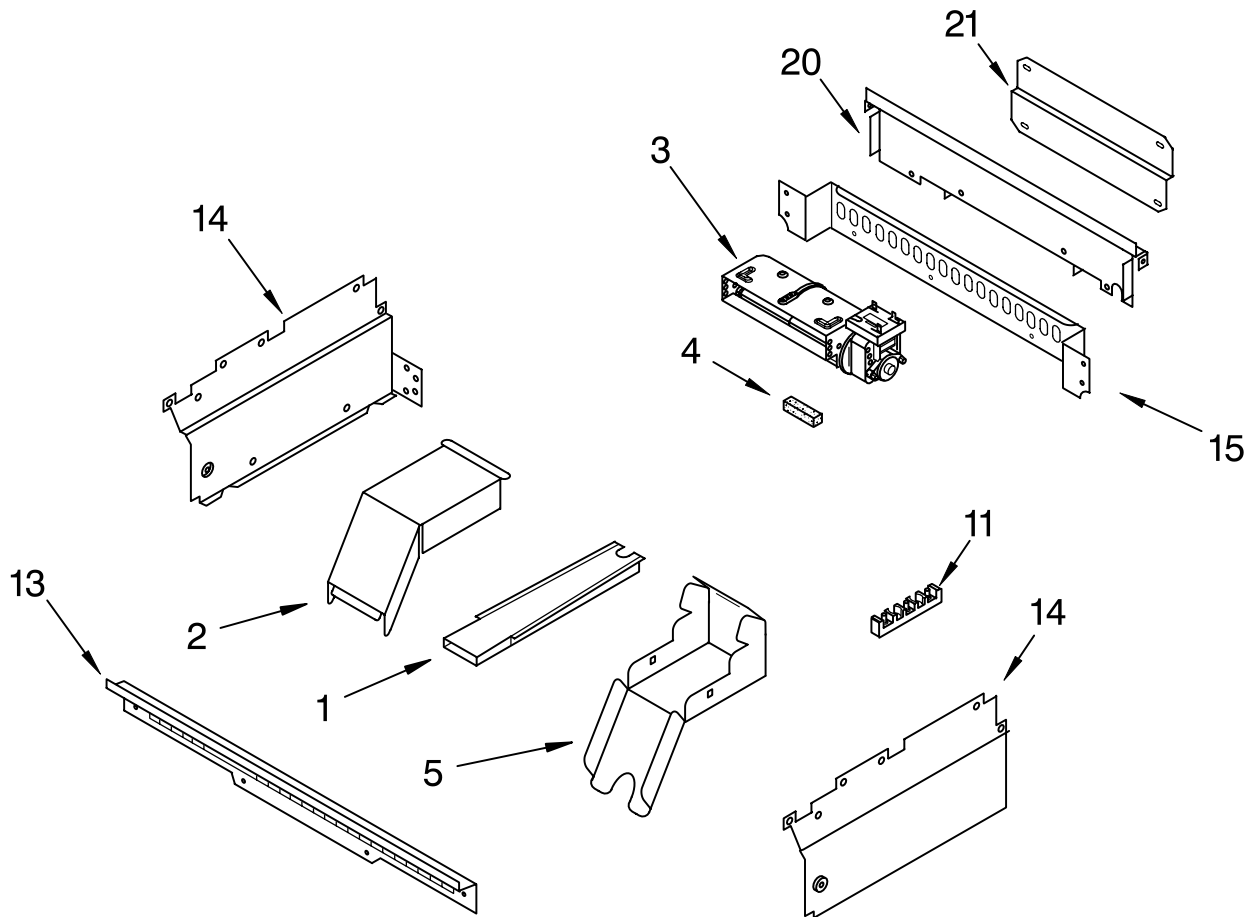

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

NOTE: The screws and nuts required to attach a part are listed immediately following that part.

1	4451759	Vent, Exhaust
	4449040	Screw
2	4455178	Elbow, Vent-Top
3	4455334	Blower
	4455352	Bracket, Blower

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

4	4451758	Block, Foam
5	4455177	Elbow, Vent-Bottom
11	4449868	Block, Terminal
	3400080	Screw
13	4448549	Vent, (Control Panel)
	4450038	Screw


Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

14		Side, Control Compt.
	4451535	Right
	4451536	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
20	3191842	Cover, Rear
21	4451407	Plate, Support
	4452260	Spacer, Foam

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

# INTERNAL OVEN PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

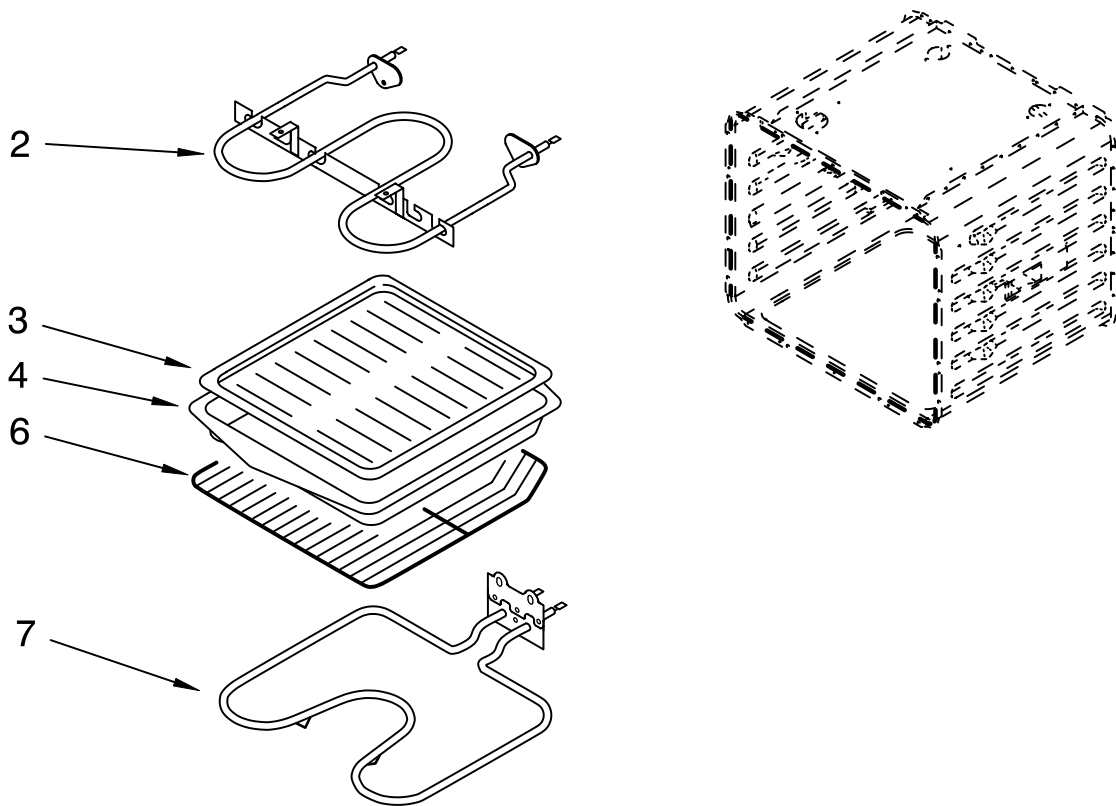

Illus. No.	Part No.	DESCRIPTION
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448717	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST



# OPTIONAL PARTS

For Models: RS696PXGB7, RS696PXGQ7  
(Black) (Designer White)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## PAINT, TOUCH-UP (1/2oz.)

	72017	White
	261869	Cord Brown
	72032	Black

## PAINT, SPRAY

	350930	White
	261900	Citrine White
	830864	Black

## ADHESIVE

	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## SPLICING WIRES--25FT.

### LENGTH

242828	Wire (12 Ga. 150 c Black)
242820	Wire (14 Ga. 150 c Black)
242821	Wire (14 Ga. 150 c Blue)
242822	Wire (14 Ga. 150 c Brown)
242830	Wire (14 Ga. 200 c Brown)
242823	Wire (14 Ga. 150 c Green)
242824	Wire (14 Ga. 150 c Orange)
242829	Wire (12 Ga. 150 c Red)
242825	Wire (14 Ga. 150 c Red)
242831	Wire (14 Ga. 200 c Red)
242826	Wire (14 Ga. 150 c White)
242827	Wire (14 Ga. 150 c Yellow)
242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

## WIRING HARNESS PARTS

4455733	Harness, Wire (Main)
3191956	Harness, Wire (Infinite Switch)
4455280	Harness, Wire (Burners)
4451163	Conduit
4448664	Clamp
4449809	Screw 112432 Nut
4450800	Screw, Ground
4451761	Support, Wiring
4454842	Tie, Cable
4452222	Spacer, Harness

## Miscellaneous

814381	Pin Hinge Kit
4448950	Screw, Install (4)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST